PREPARE THE GROUND, UNWRAP THE PACKAGE,
LAY OUT THE COMPONENTS, FIND THE TOOLS.

BENTE III 28

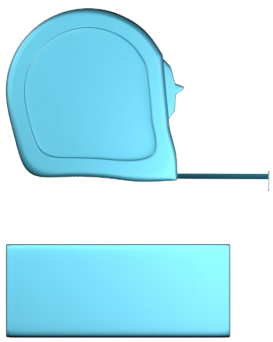

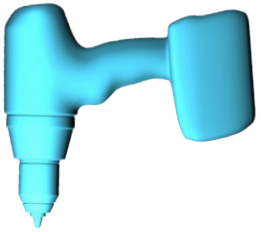

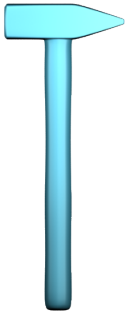

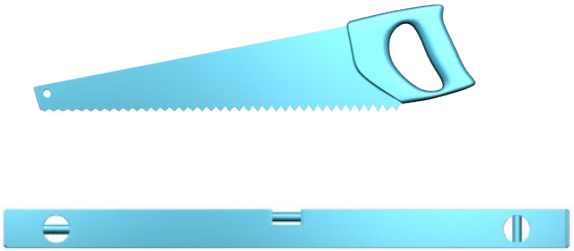

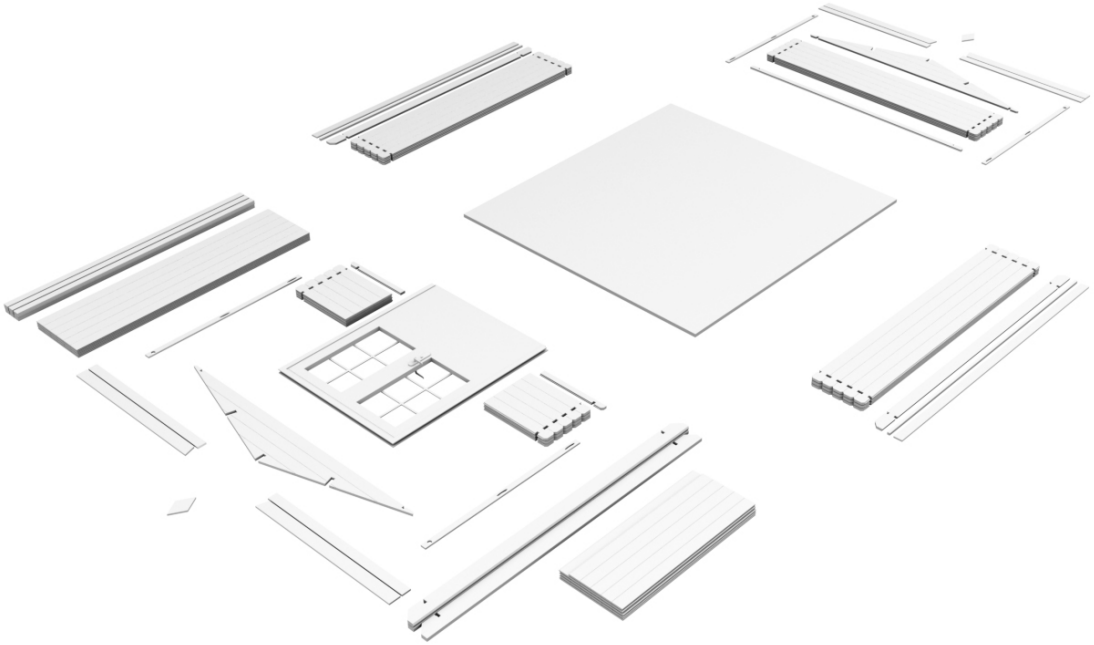

× 55



× 370

× 10

× 30

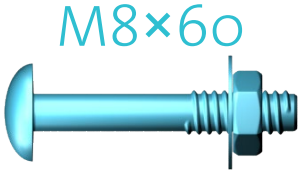

× 12



× 30

BENTE III 28

LAY OUT THE FOUNDATION BEAMS AND SQUARE IT BY MEASURING FROM CORNER TO CORNER.

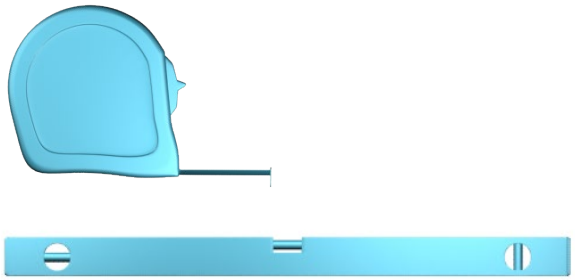

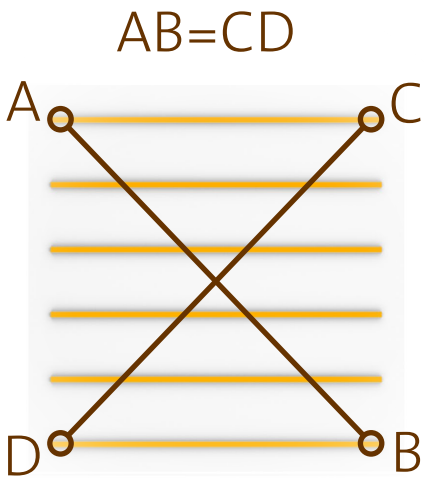

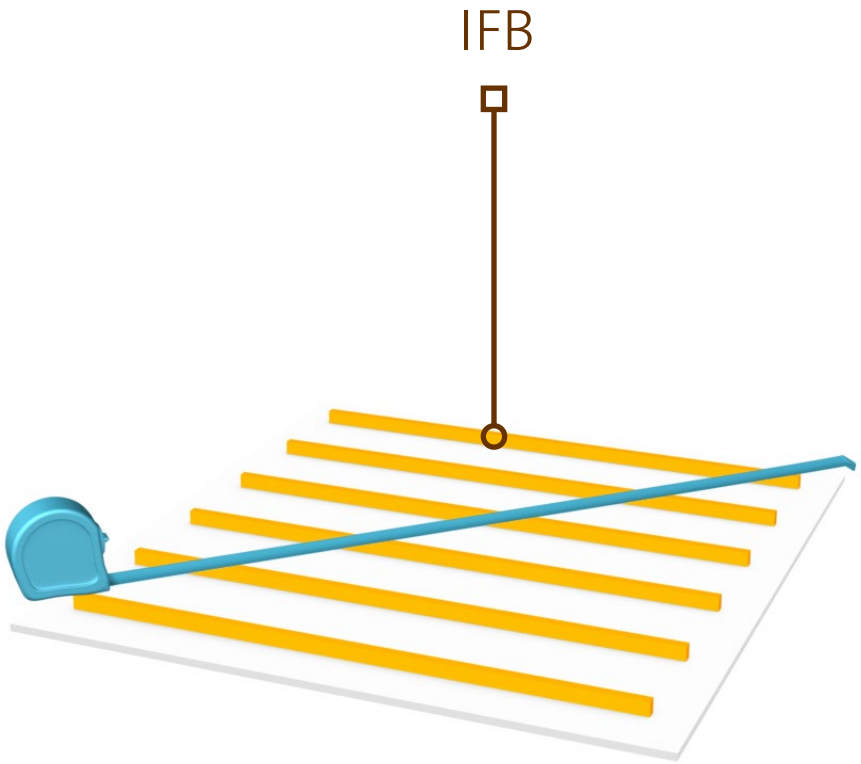

MAKE SURE THAT THE FOUNDATION IS INSTALLED ON A LEVEL SURFACE. CHECKING ALL DIRECTIONS, INCLUDING CORNER TO CORNER. 3%

BENTE III 28

LAY OUT THE BOTTOM LOGS, ATTACH TO THE FOUNDATION.

5×70 × 5

6×140 × 12

Ø 4 mm

Ø 5 mm

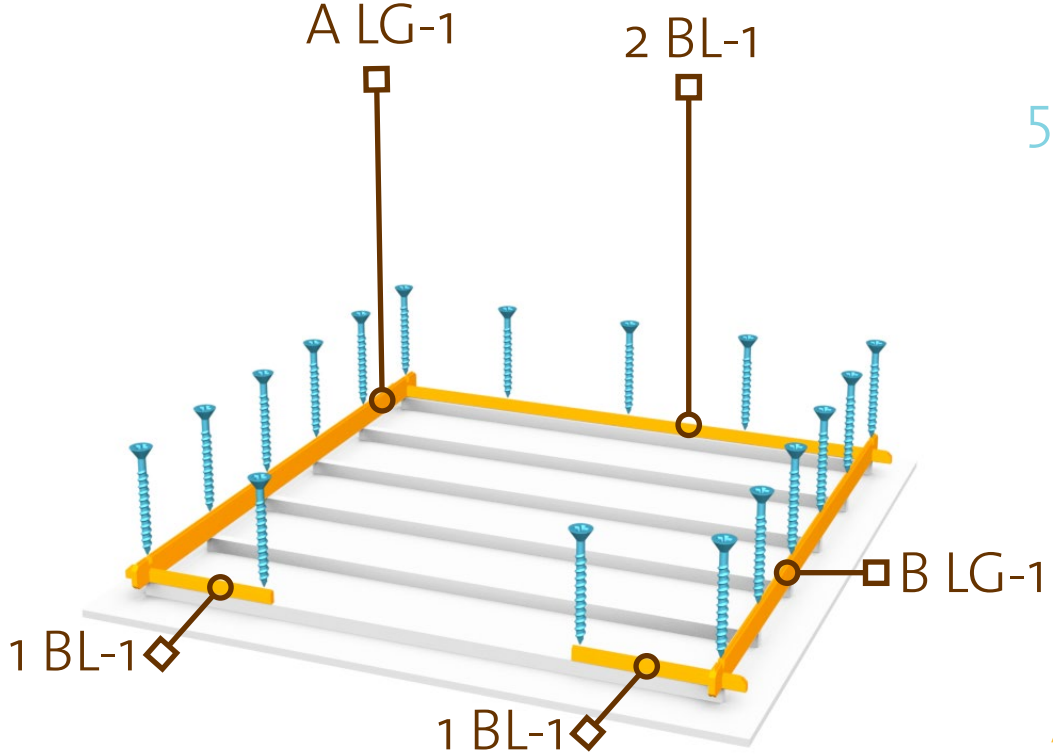

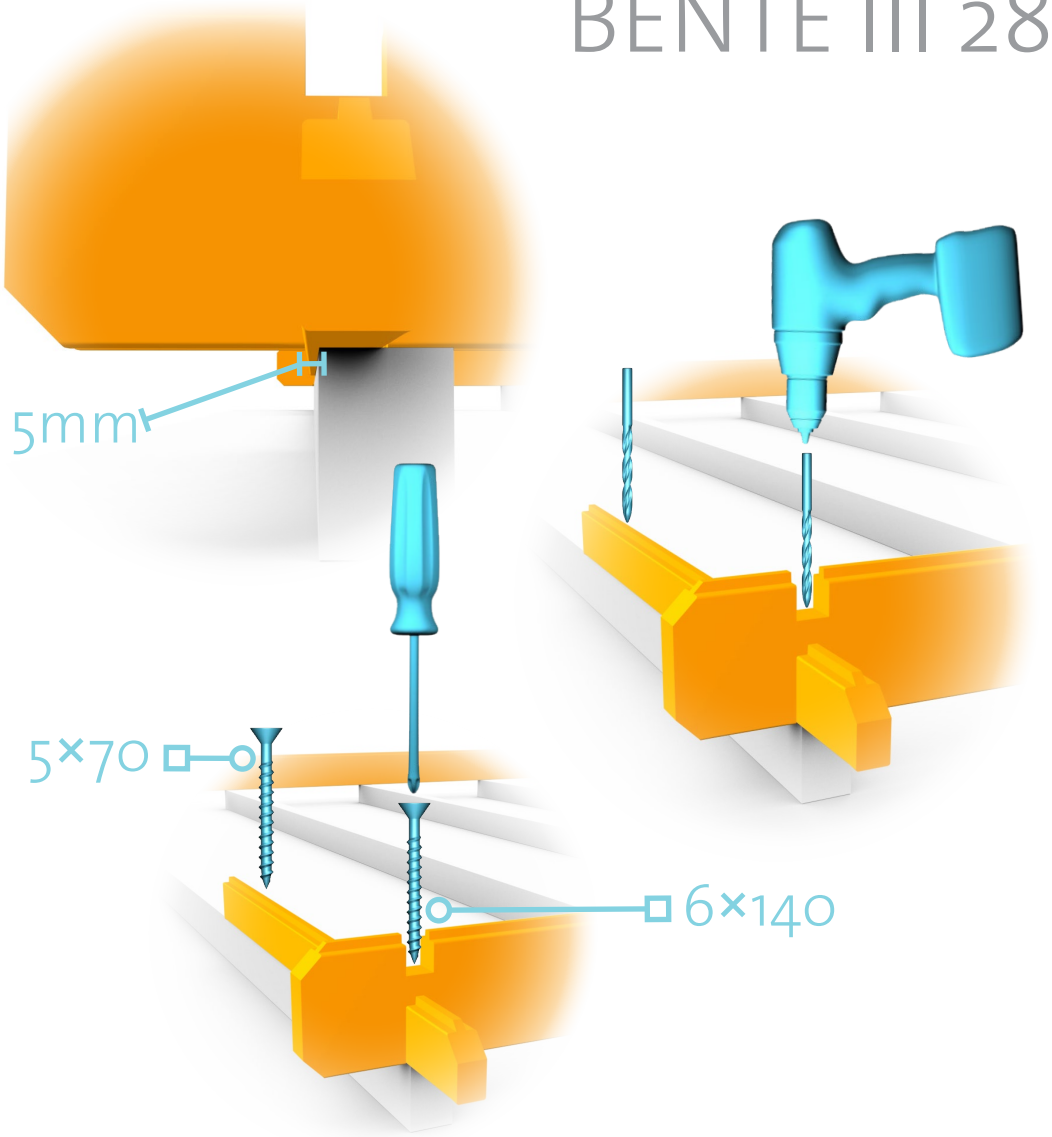

THE WALL LOGS WILL HANG OVER THE FOUNDATION BEAMS BY APPROXIMATELY 5MM. THIS OVERHANG IS DESIGNED AS A RAIN DRIP. 5%

ATTACH THE FIRST ROW OF WALL LOGS INTO THE BOTTOM LOGS WITH SCREWS.

5×70 × 4

6×140 × 5

Ø 4 mm

Ø 5 mm

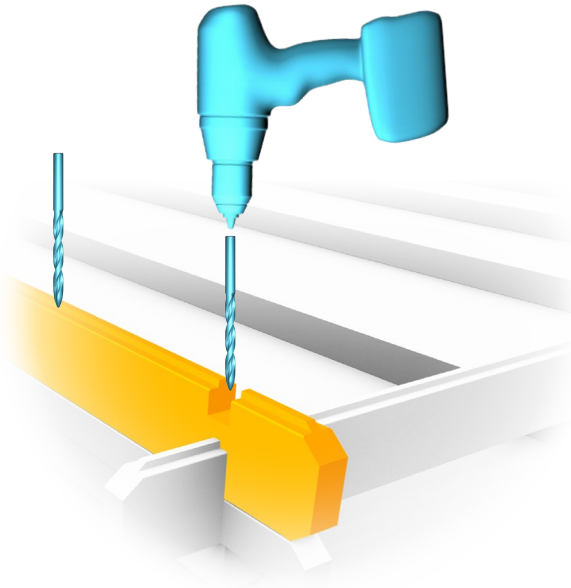

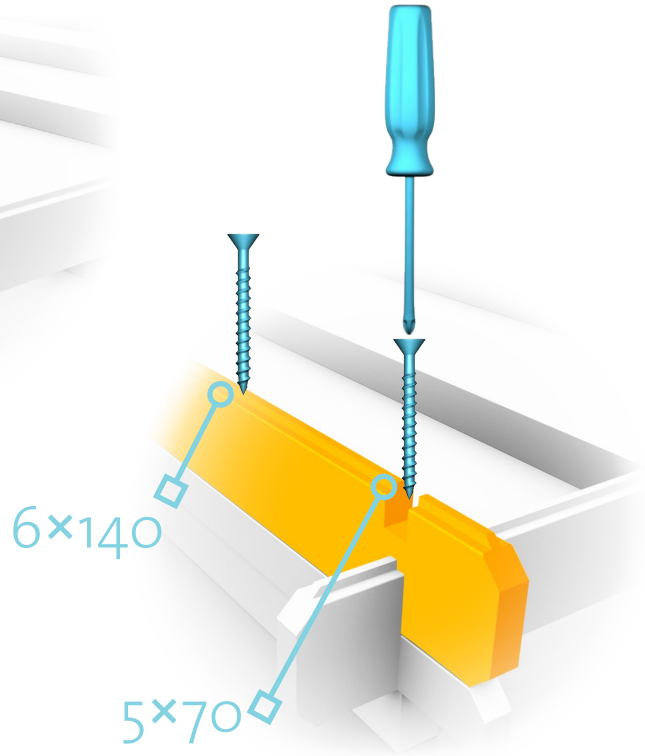

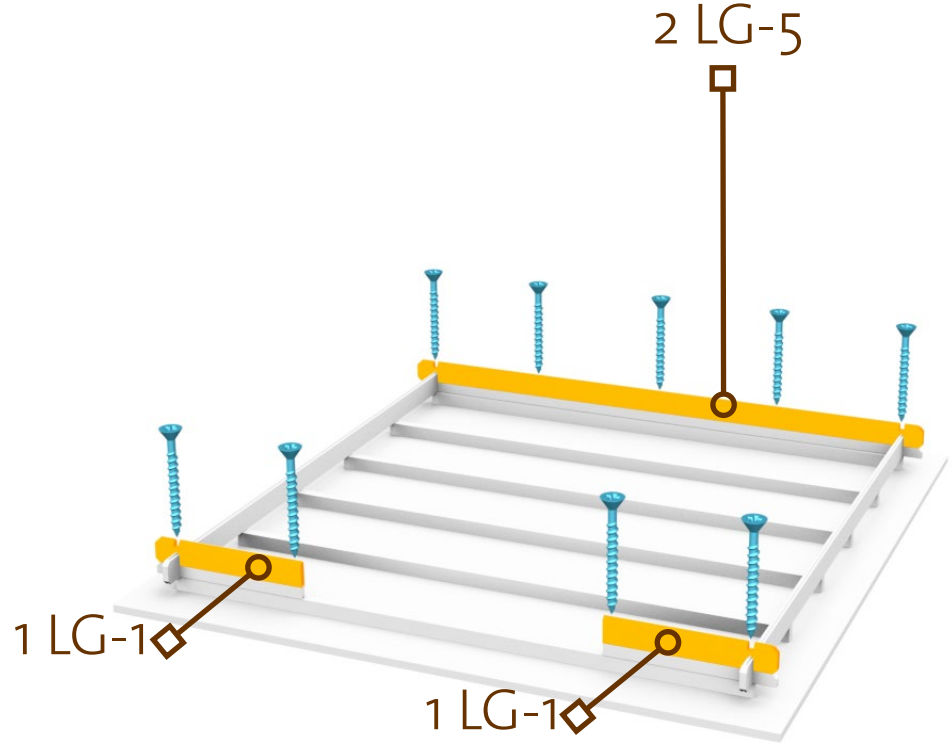

AFTER PLACING 3-4 ROWS OF WALL LOGS, TAP EACH WALL LOG IN PLACE USING A HAMMER AND THE HITBLOCK PROVIDED, TO TIGHTEN THE LOGS.

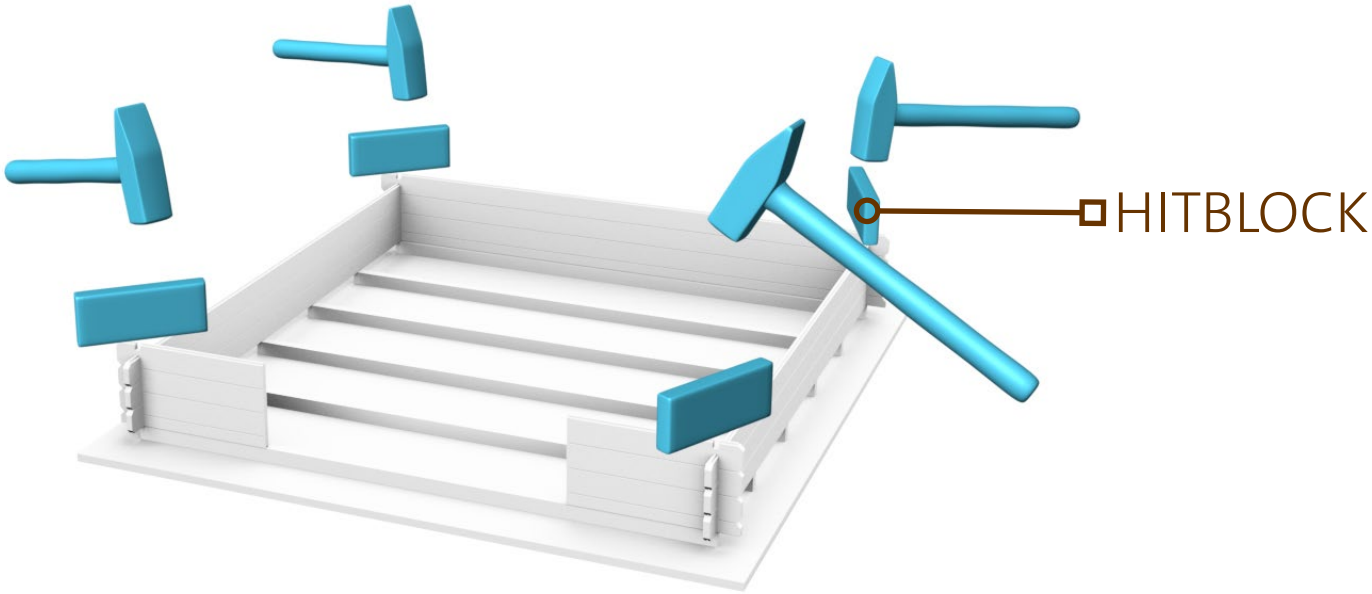

SLIDE THE DOOR IN, ATTACH THE HANDLE.

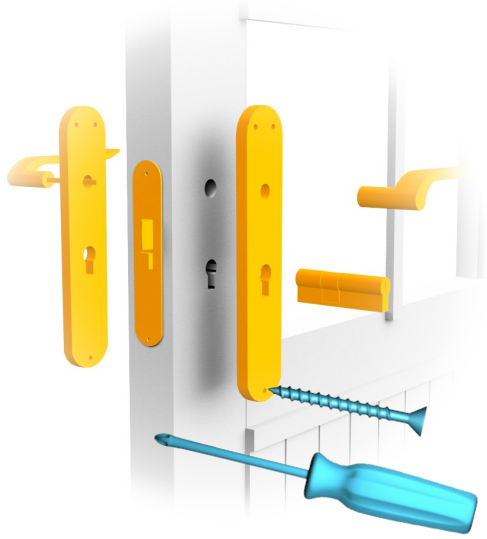

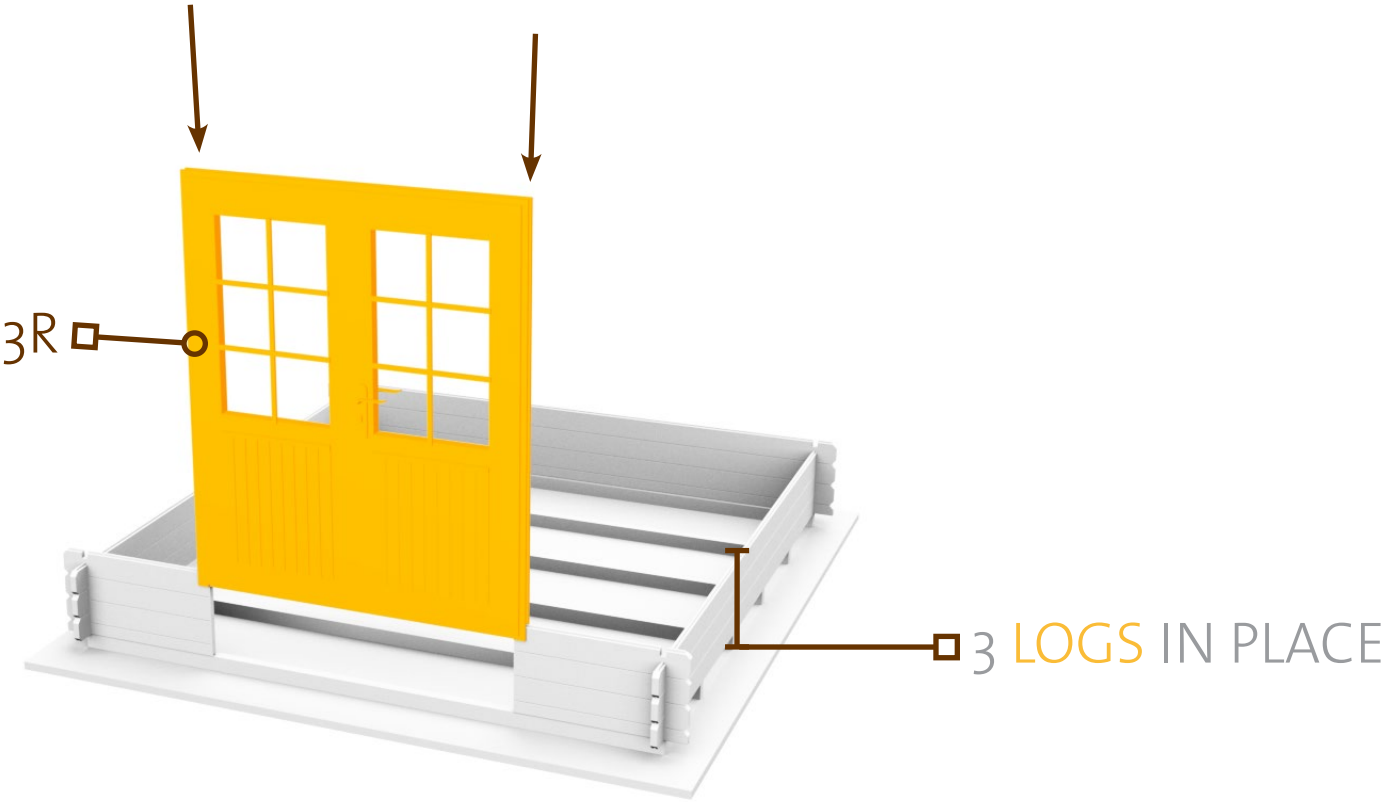

DON`T FORGET TO
TIGHTEN THE LOGS AFTER
EVERY 3-4 ROWS.

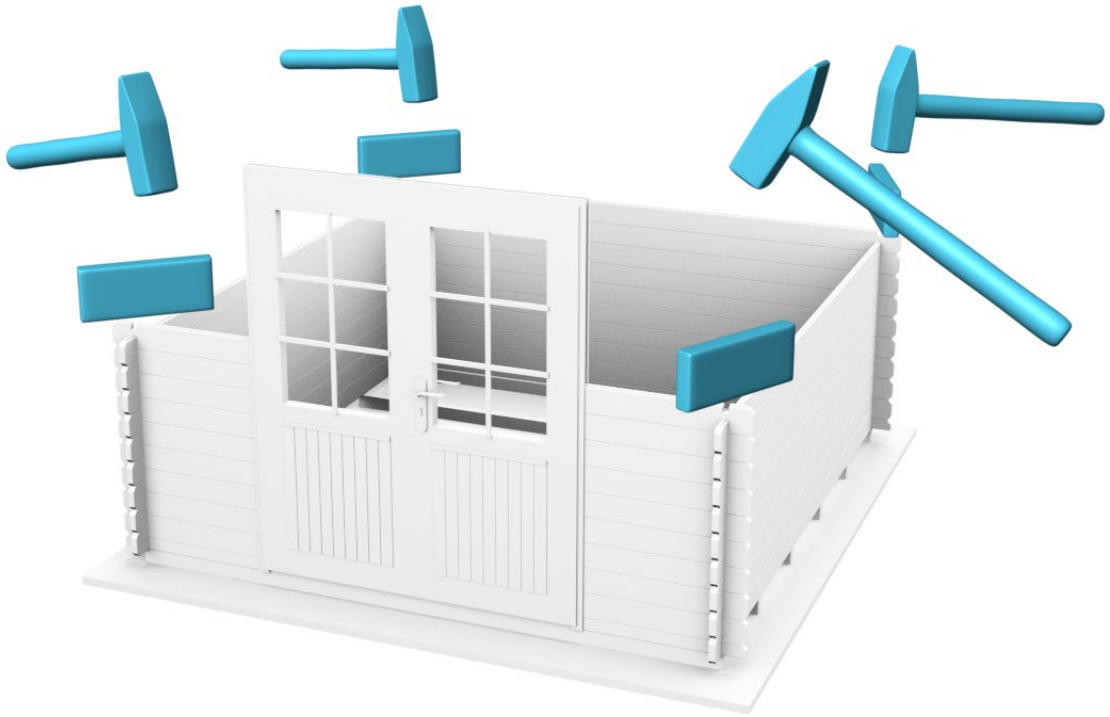

INSTALL THE GABLES WITH LONG SCREWS TO THE WALL LOGS ON THE FRONT AND REAR WALLS.

× 4

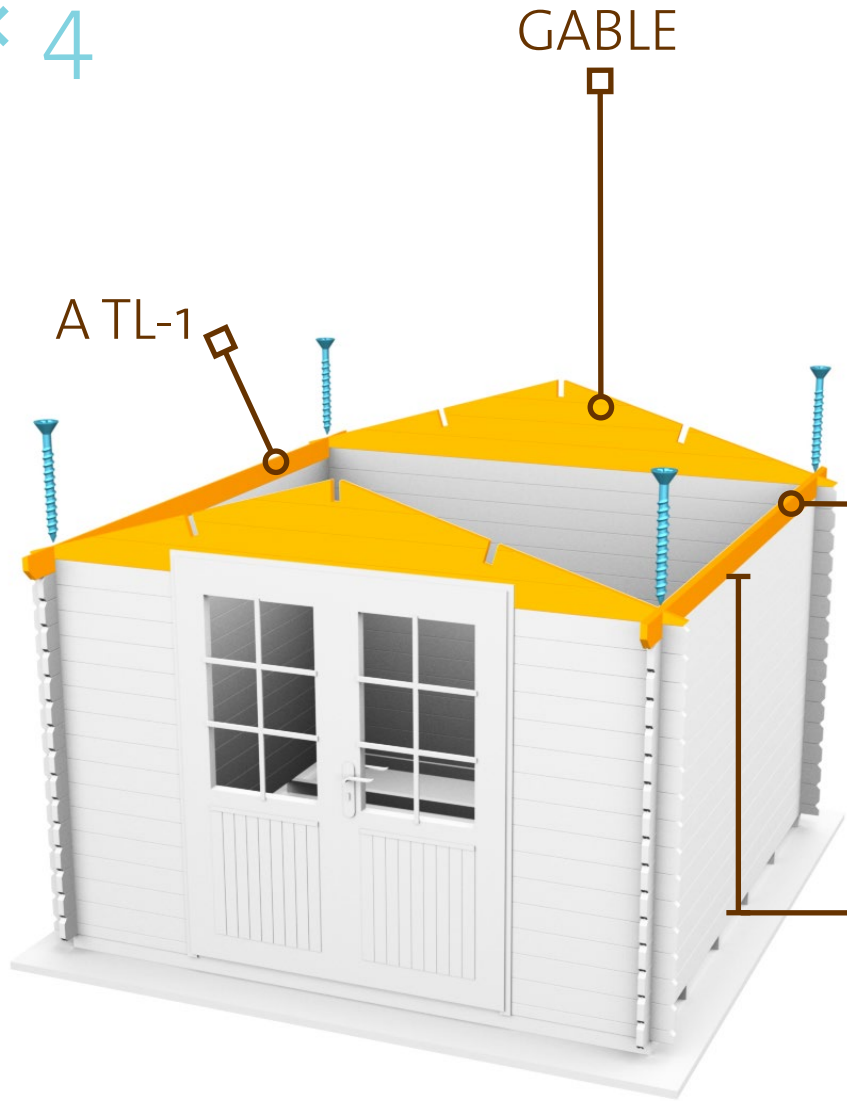

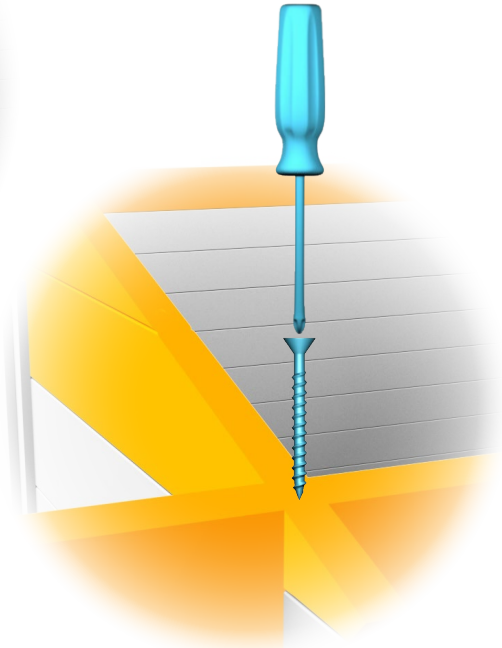

INSTALL THE ROOF PURLINS AND ATTACH THEM WITH SCREWS.

× 6

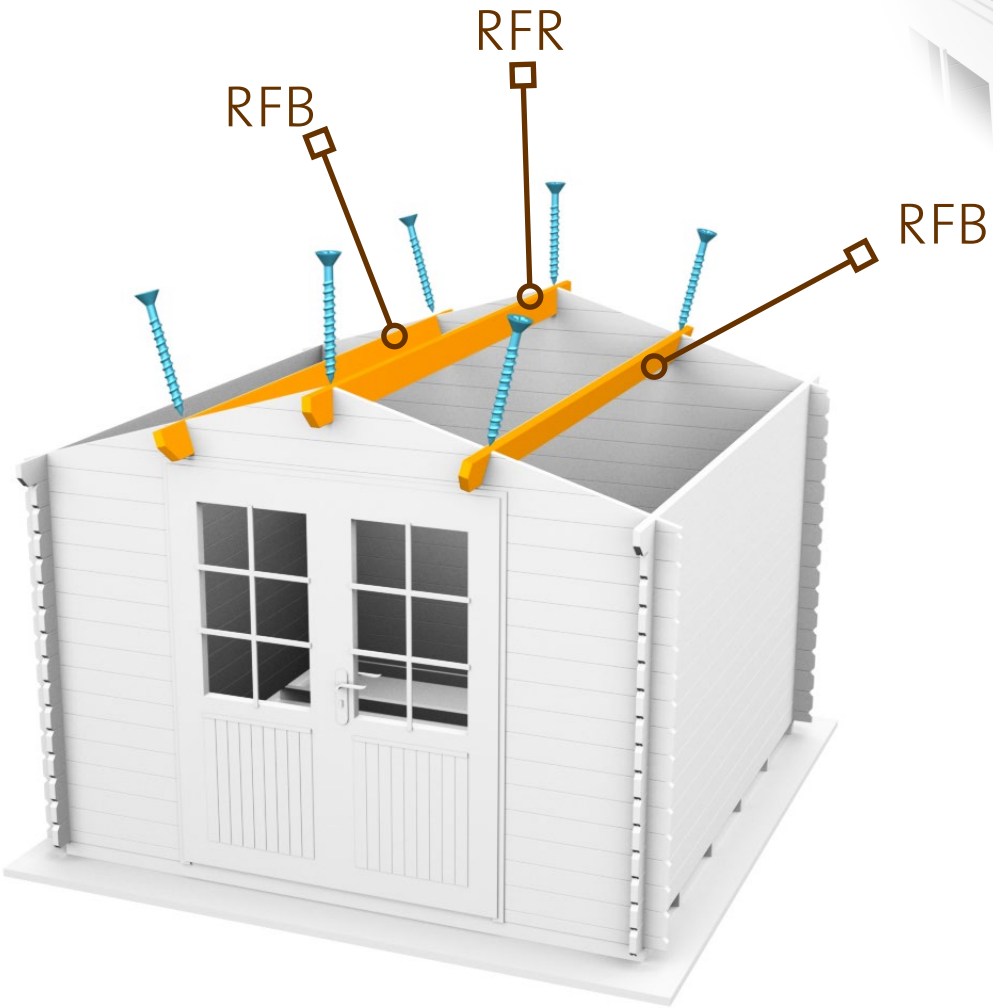

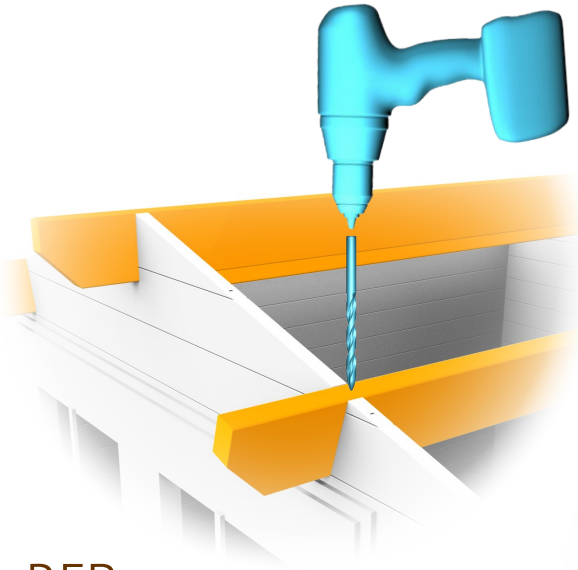

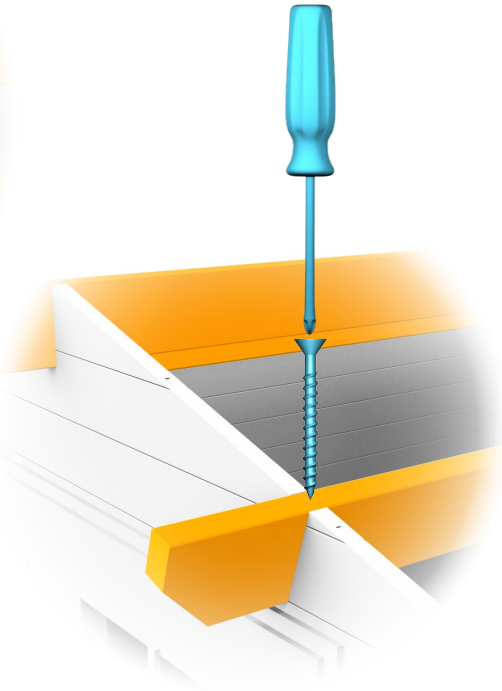

PLACE THE FIRST ROOFBOARD FLUSH WITH THE END OF THE PURLINS AND ATTACH WITH 6 SCREWS, 3 INTO EACH NEXT, SAW THE LAST BOARD TO MAKE IT FIT.

4×50 × 186

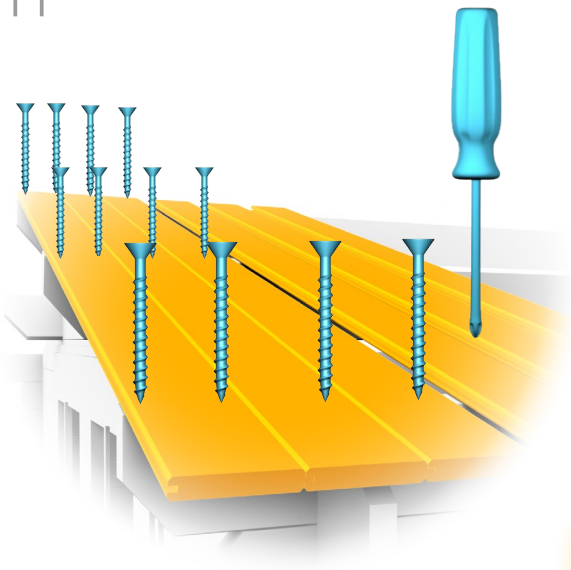

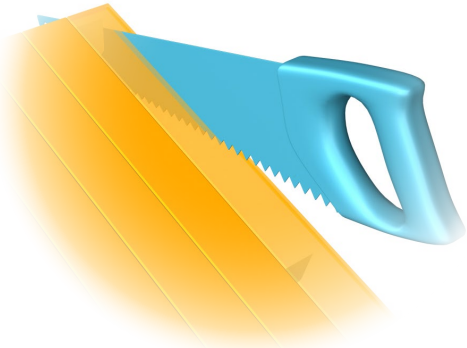

BENTE III 28

INSERT FOR THE FASCIA TRIMS
SCREWS AFTER EVERY 0,5 METERS.

4×40 × 28

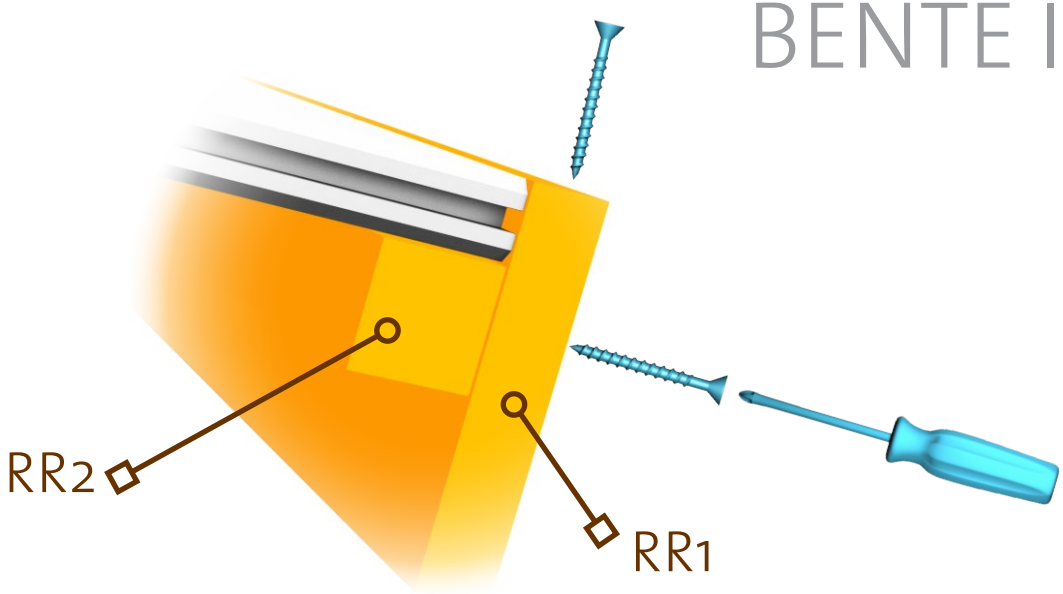

BENTE III 28

EAVES EDGES GO ON TOP OF THE ROOFING*.
*(NOT INCLUDED)

4×40 × 28

Ø 3 mm

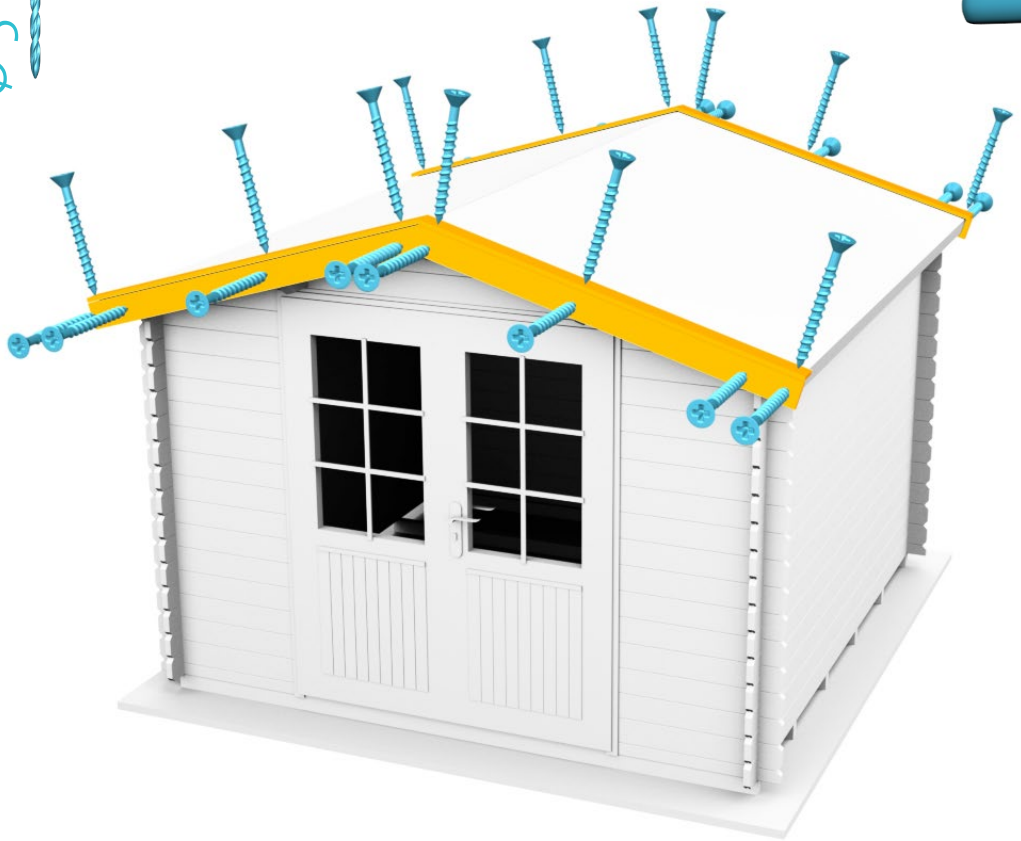

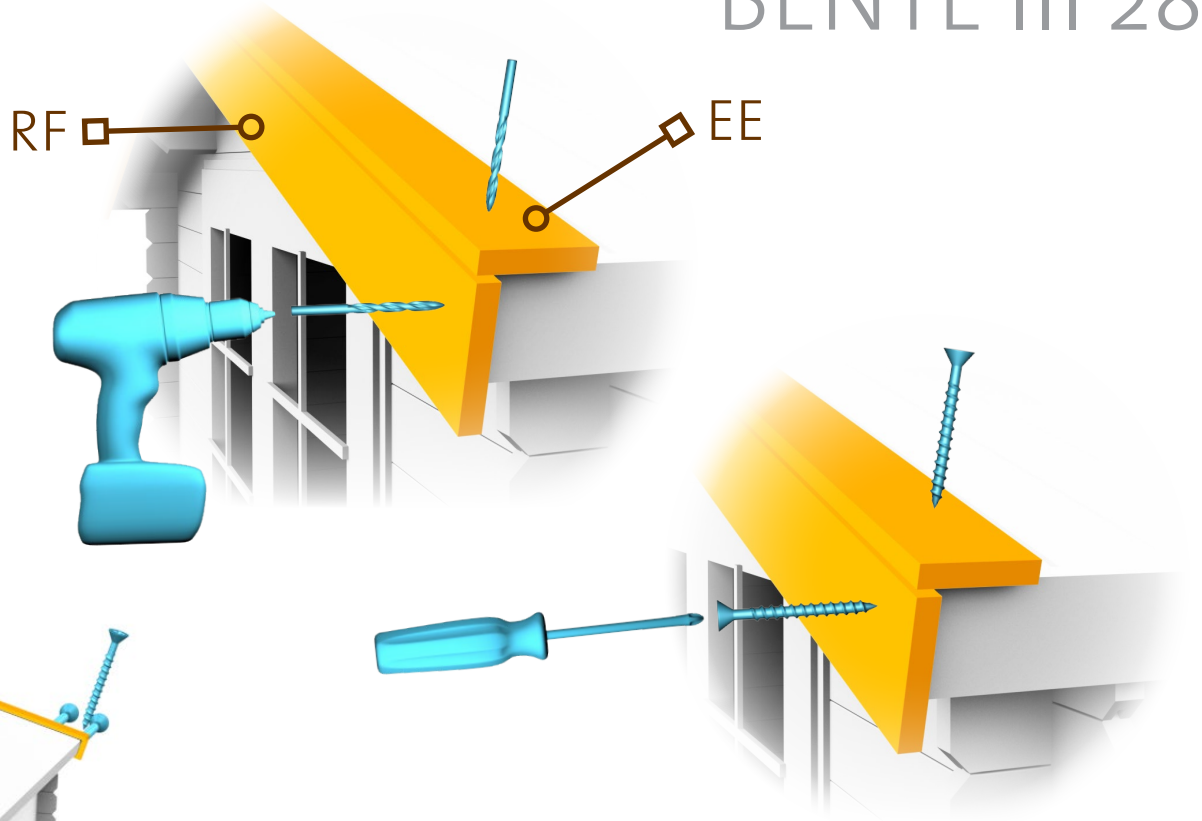

4×40 × 4

Ø 3 mm

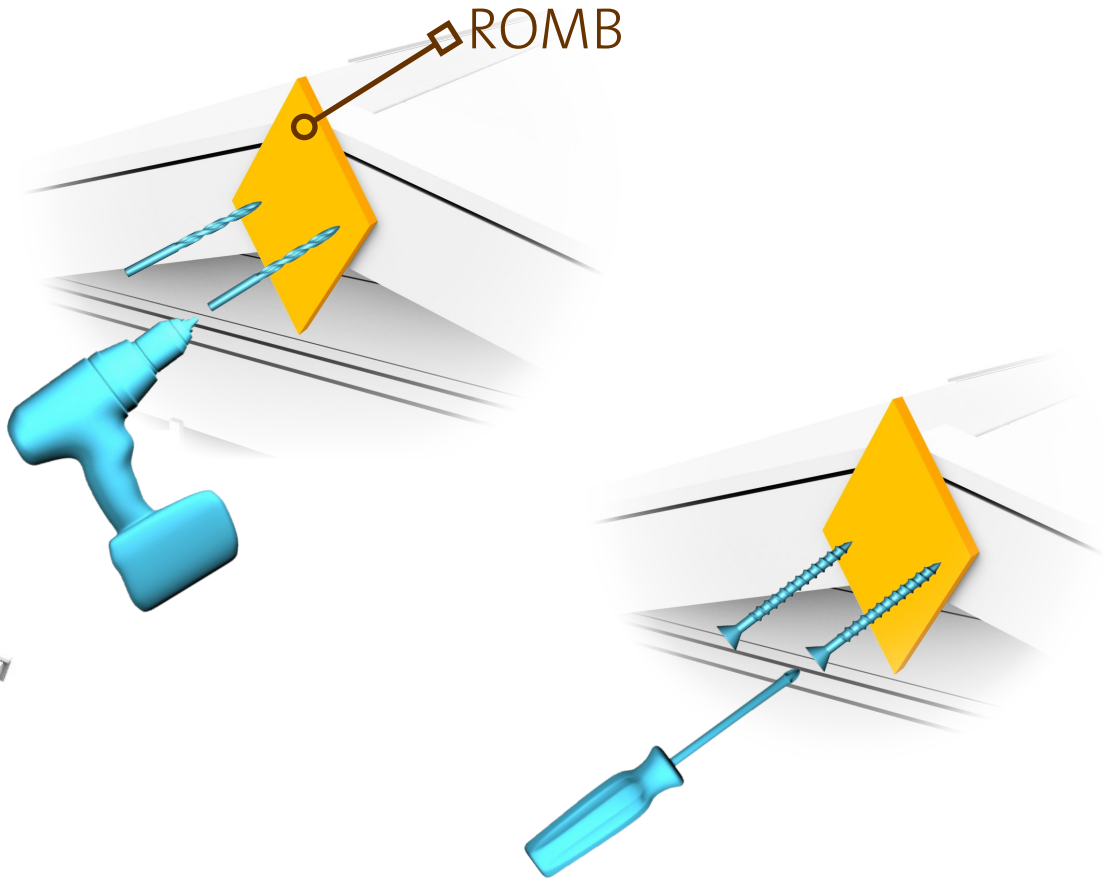

16 SCREWS INTO THE FIRST FLOORBOARD,
8 INTO EACH NEXT, SAW THE
LAST BOARD TO MAKE IT FIT.

4×50 × 162

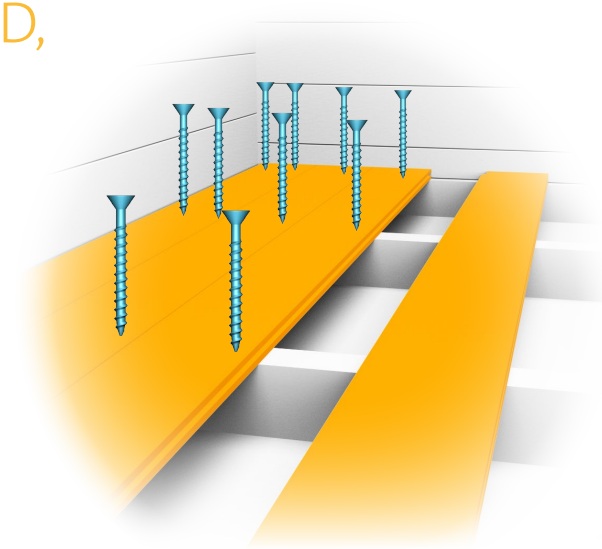

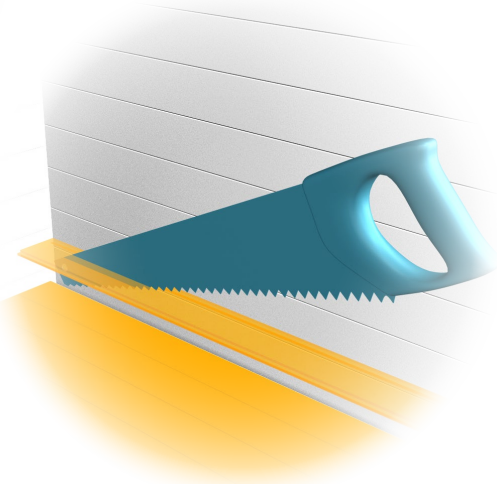

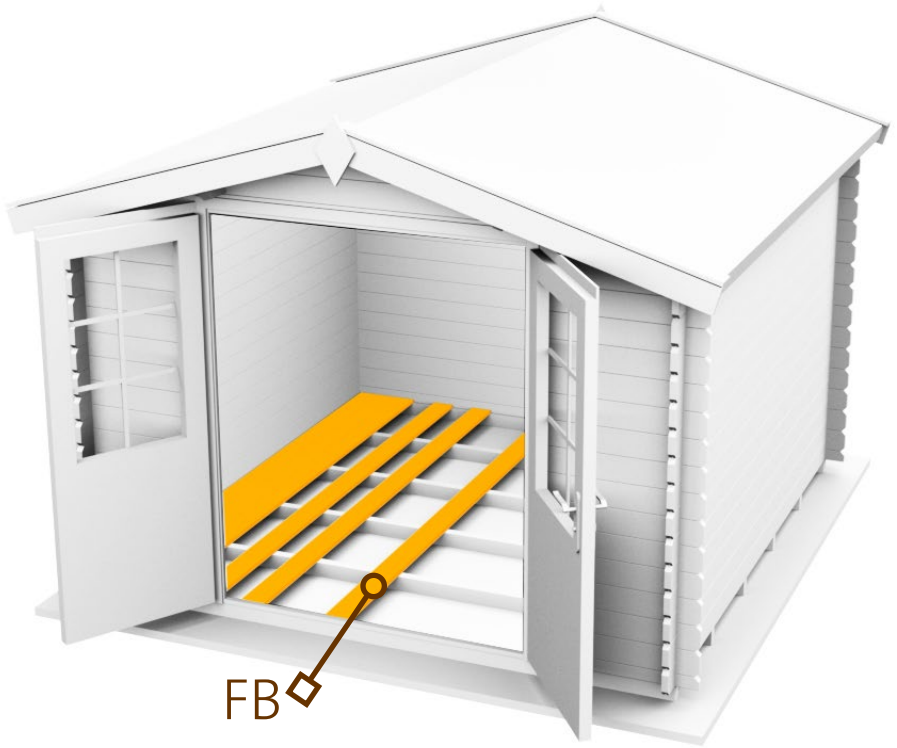

SAW THE BASEBOARDS
AND ATTACH WITH NAILS
AT EVERY 0,5 METERS.

1,4×40 × 30

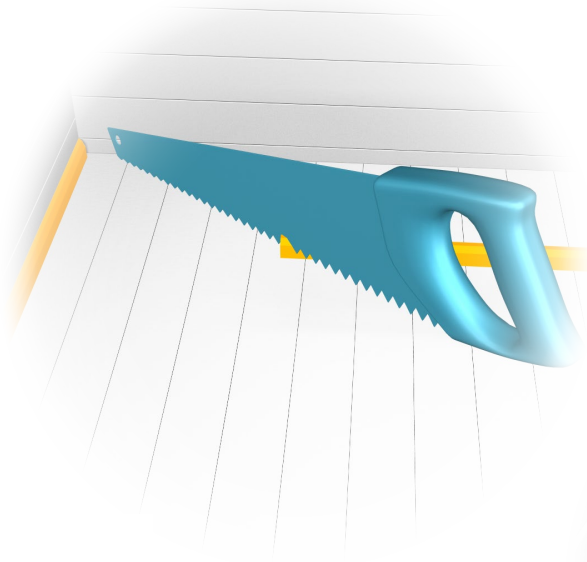

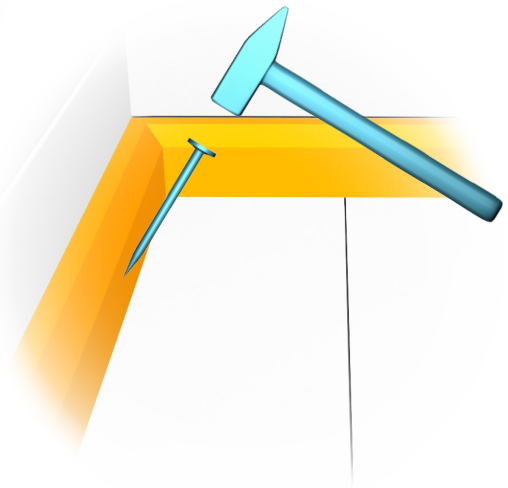

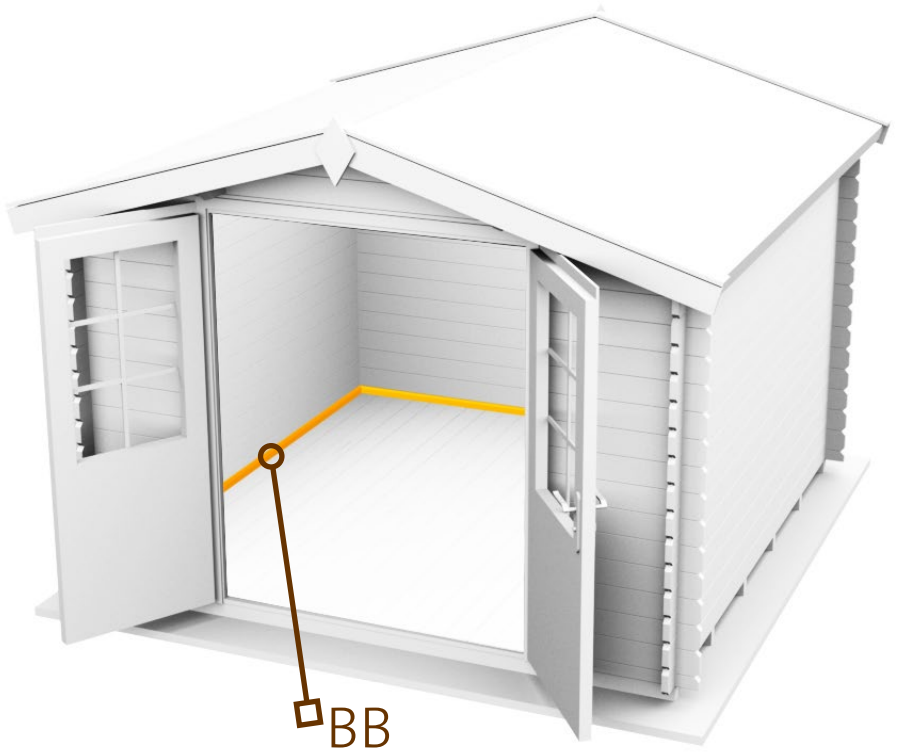

DRILL THROUGH THE WALL, HOLE MUST BE AT THE BOTTOM OF THE OVAL, ATTACH WITH BOLT.

× 12

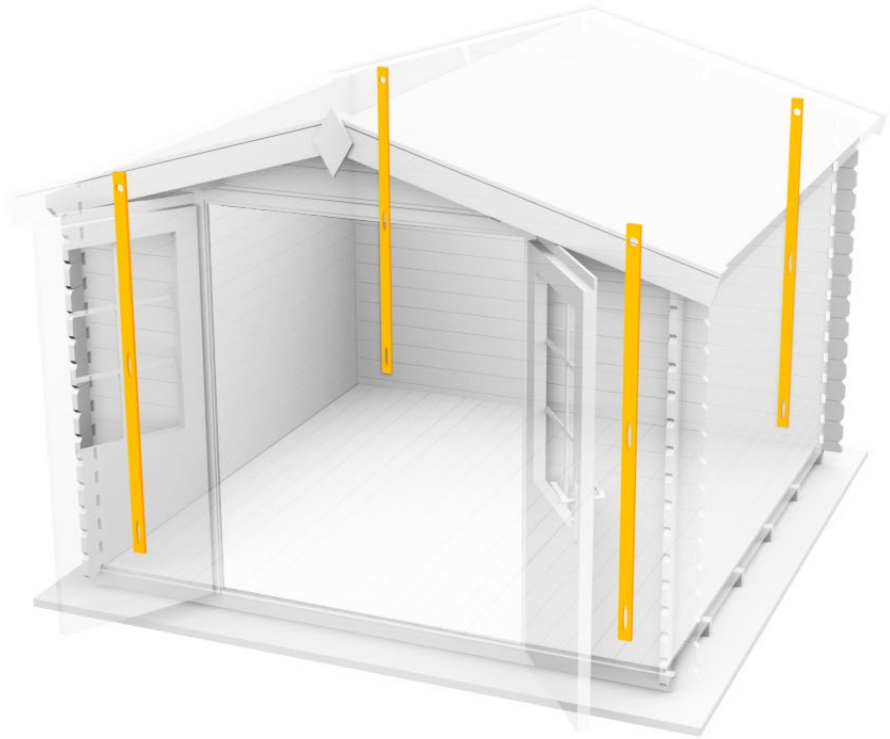

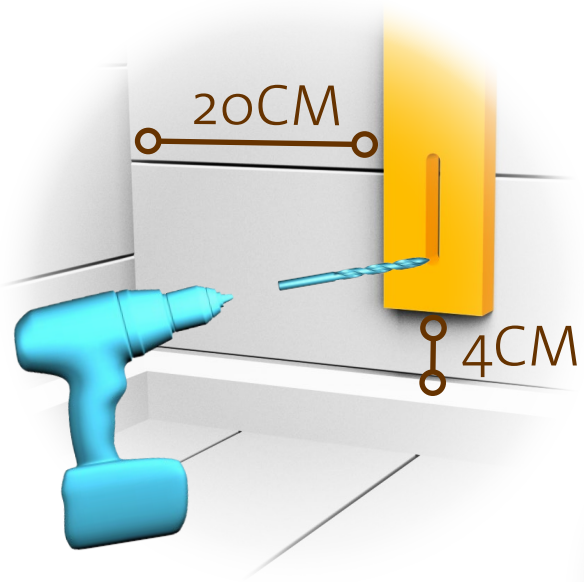

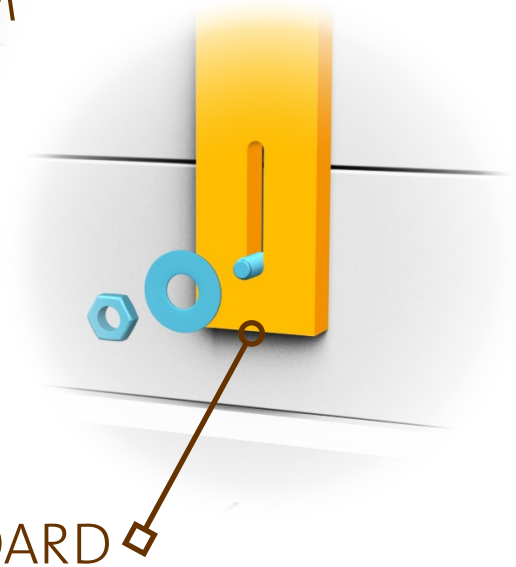

IF DOOR IS TILTED,
PUSH THE DOOR FRAME SO
THAT ALL CORNERS ARE 90°.

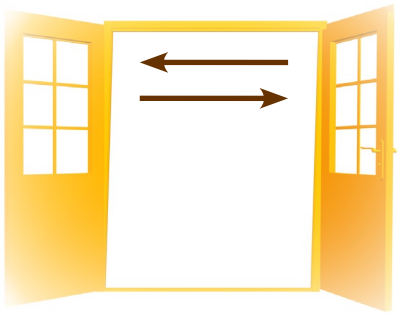

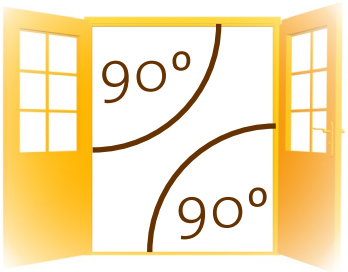

BENTE III 28

IF DOORS ARE IN DIFFERENT HEIGHTS
OR THERE IS A GAP BETWEEN THEM,
ADJUST 3 SCREWS ON DOOR HINGES.

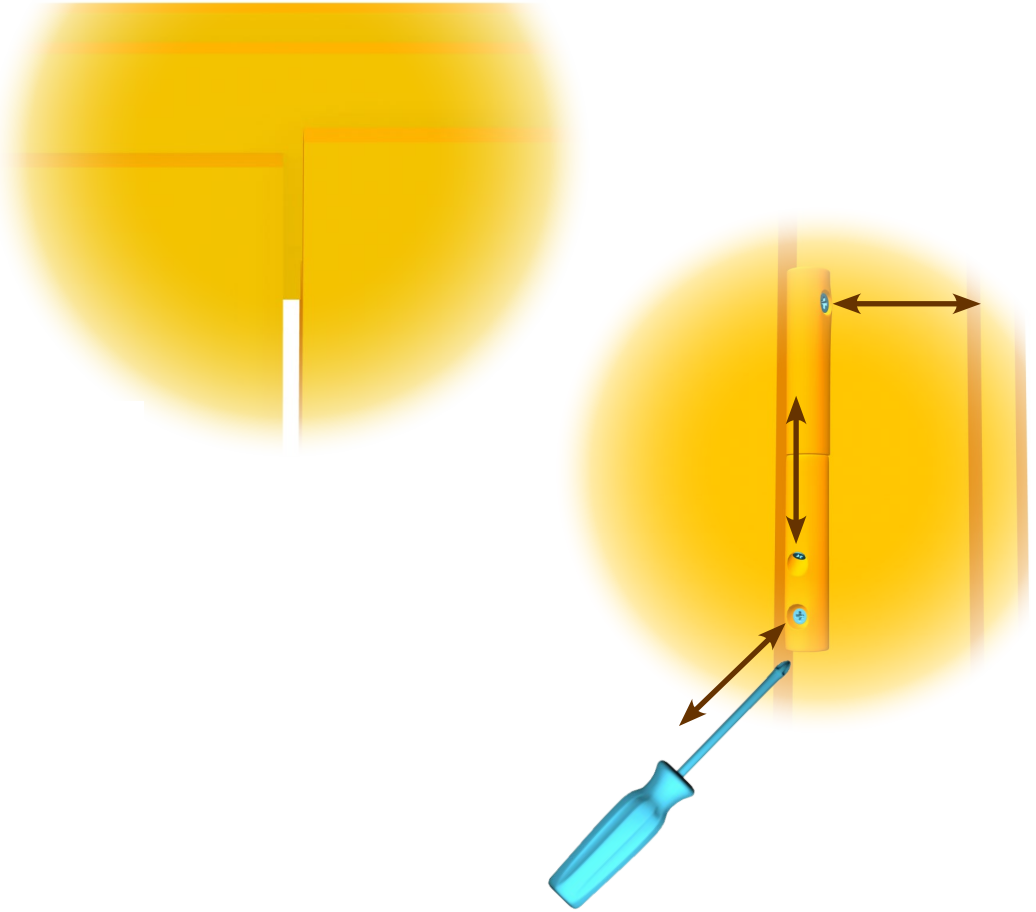

WHEN THE HOUSE IS ASSEMBLED, YOU SHOULD COVER THE TIMBER WITH WOOD PROTECTIVE SEAL, PAINT OR STAIN AS SOON AS POSSIBLE TO AVOID DETERIORATION TO THE WOOD.

BENTE III 28